

GB HOUSEGARD NOTE DC324NX SMART DOOR/WINDOW CONTACT

We recommend that you take your time to read this user manual in order to fully understand all the features.

The door/window contact is a magnetic sensor that detects if a door or a window is open. If the hub notice that a door or window is opened or closed, the hub will push a message directly to your smart phone.

 
See "Housegard Note - Quick Guide" for more information. It's available digitally in the app under Configuration/System instruction.

FEATURES

- Safe, reliable and convenient wireless communication.
- Three kinds of status.
- Low standby current, long battery life.
- Wireless communication; safe, reliable and convenient.
- Wireless distance: 50 meters in an open air.
- Easy to join Housegard Note system.

ILLUSTRATION

Number	Name
1	LED
2	Button
3	Mainframe
4	Magnet

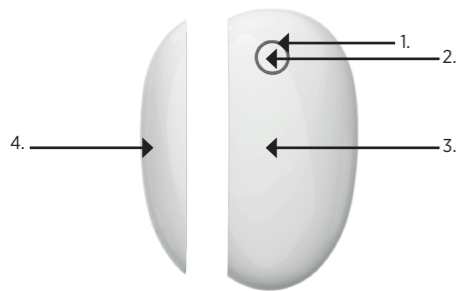

INSTALLATION INSTRUCTION

Installation location:

- If installed on a door, the mainframe is usually mounted on the door frame.
- If installed on a window, the mainframe is usually mounted on the windows frame.
- The distance between the mainframe and the magnet should be max 7 mm after the installation.
- The door/window contact is suitable when the door/window and the door/window frame are at the same level.

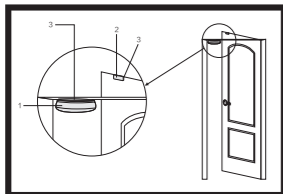 


Figure 1 Door frame and door do not level.

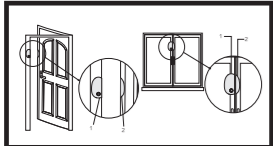 


Figure 2 Window/window frame and door/door frame are at the same level.

REPLACE THE BATTERY



1) Slide the plate on which the sticker label is mounted to one side. Then remove the battery cover.



 
2) Remove the battery and enter the new.



3) Close the battery cover.

OPERATION INSTRUCTION

Before first use, remove the battery insulation film as shown below.

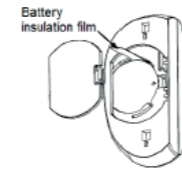

ADD DEVICE TO HOUSEGARD NOTE SYSTEM.

You need the Housegard Note Hubb GW124NX and Housegard Note app to connect it to the system.

Step 1: Select "Device" from the menu in your app.

Step 2: Click the "add" / "+" sign in the upper right corner. At this point, the LED on the actual hub should flash green.

Step 3: Press the button rapidly 3 times (within 2 seconds) on the device that you would like to connect.

Step 4: A dialog box appears in the app. Name your device (optional).

See "Housegard Note - Quick Guide" for more information.

STATUS

Red LED flashes once on door contact:	Door/Window opened or closed.
Green icon in app	Normal status. (Door/Window closed)
Red icon in app	Door/Window open.

TECHNICAL SPECIFICATIONS

Battery	DC3V(CR2450x1)
Standby current:	≤5 μA
Alarm current:	≤30 mA
Frequency:	868 MHz
Wireless distance:	50 m in an open air
Environment:	0 °C to +55 °C, ≤95%(RH)
Size:	Mainframe: 68×34×20 mm Magnet: 62×12×19 mm
Frequency band:	868-870 MHz
Effective radiated power:	11,54 dBm

TROUBLESHOOTING

Number	Problems	Reasons	Solutions
1.	The icon in app doesn't change color while door / window open or close.	Hub doesn't connect to the wifi network. Distance between door contact and hub is too long.	Check wifi or re-configure the network. Adjust the installation location.
2.	The LED doesn't flash while door/window opens or closes.	The distance between the mainframe and the magnet is more than 7 mm.	Adjust the installation location.
3.	The communication distance between the door contact and the hub is short (<50m).	Low battery power.	Replace battery.
4.	The red LED is on.	Product broken.	Contact your dealer.

WARRANTY

DC324NX comes with a 5-year limited warranty against manufacturing defects.(Valid from date of purchase.) The batteries are not covered by the warranty. Liability under the warranty is limited to the value of an equivalent sensor. Defective sensors should be returned to the retailer, along with a description of the problem. If the claim is approved, the faulty goods will be replaced with a new door/window sensor of the same or an equivalent type. Any claim must be accompanied by a receipt confirming the date of purchase.

DK HOUSEGARD NOTE DC324NX DØR- OG VINDUESKONTAKT

Vi anbefaler, at du sætter tid af til at læse denne brugsvejledning igennem, så du forstår alle funktionerne.

Dørkontakten er en magnetisk sensor i 2 dele, der bruges til i realtid at detektere, om en dør eller et vindue er åbent eller lukket. Hvis hubben bemærker, at en dør eller et vindue åbnes eller lukkes, sendes en besked direkte til din mobiltelefon.


Se "Housegard Note - Hurtigguide" for yderligere information. Du kan finde den digitalt i appen under "Indstillinger/Systemspecifikation".

EGENSKABER

- Sikker, pålidelig og problemfri trådløs kommunikation.
- Tre status typer.
- Lavt strømforbrug ved standby, lang batterilevetid.
- Trådløs kommunikation; sikkert, pålideligt og praktisk.
- Trådløs rækkevidde: 50 m ved frit sigte.
- Nem at koble til Housegard Note-systemet.

ENHED


Nummer	Navn
1	Lysdiode
2	Knap
3	Hoveddel
4	Magnet

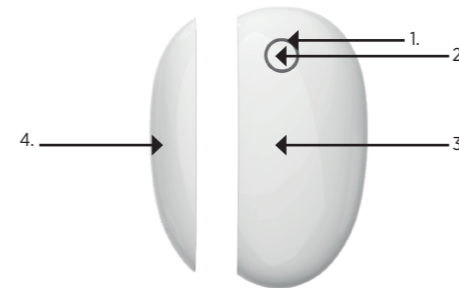 


INSTALLATIONSANVISNING

Monteringssted

 - Monter hoveddelen på dør-/vindueskarmen.
- Afstanden mellem hoveddelen og magneten må være maks. 7 mm.
- Dørkontakten kan bruges, når der ikke er nogen højdeforskel mellem dør/vindue og dør-/vindueskarm.
- Monter hoveddelen og magneten, så de er i niveau med hinanden.

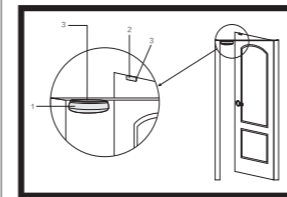

 Figur 1 Dørkarm og dør er ikke i niveau.

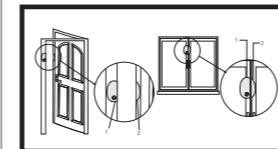

Figur 2 Dør/dørkarm og vindue/vindueskarm er i niveau.

UDSKIFT BATTERI



1) Skyv platen som klistremærket er monteret på, og fjern derefter batteridekselet.



 
2) Tag batteriet ud, og sæt et nyt i.



3) Luk batteridekselet.

BRUGERVEJLEDNING

Fjern batteriisoleringen første gang kontakten anvendes.

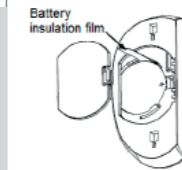

TILFØJ ENHEDEN I HOUSEGARD NOTE-SYSTEMET.

Du skal bruge Housegard Note Hubb GW124NX og Housegard Note-appen for at tilføje enheden i systemet.

Trin 1: Vælg "Enhed" i appens menu.

Trin 2: Klik på "tilføj" / "+" -tegnet i øverste højre hjørne. På dette tidspunkt skal lysdioden på selve hubben blinke grøn.

Trin 3: Tryk 3 gange på dørkontaktens knap inden for 2 sekunder.

Trin 4: Der vises en dialogboks i appen. Navngiv dørkontakten.

Se "Housegard Note - Hurtigguide" for yderligere information.

STATUS

Dørkontakten blinker rødt	Dør/vindue åbnes eller lukkes.
Grønt ikon i appen	Normal status. (Dør/vindue lukket)
Rødt ikon i appen	(Dør/vindue åbnet)

TEKNISKE SPESIFIKASJONER

Batteri:	DC3V(CR2450x1)
Standbystrøm:	≤5 μA
Strømforbr. Alarm:	≤30 mA
Radiofrekvens::	868 MHz
Trådløs afstand:	50 m ved frit sigte
Miljø:	0 °C til +55 °C, ≤95%(RH)
Størrelse:	Hoveddel: 68×34×20 mm Magnet: 62×12×19 mm
Frekvensbånd:	868-870 MHz
Maks. radiofrekvenseffekt:	11,54 dBm

FEJLFINDING

Nummer	Problem	Årsag	Løsning
1.	Ikonet i appen ændrer ikke farve, når dør/vindue åbnes eller lukkes.	Hubben kobles ikke på wi-fi-netværket. Afstanden mellem dørkontakten og Hubben er for stor.	Tjek din wi-fi, eller konfigurer netværket igen. Juster monteringsstedet.
2.	Lysdioden blinker ikke, mens dør/vindue åbnes eller lukkes.	Afstanden mellem hoveddel og magnet er mere end 7 mm.	Juster monteringsstedet.
3.	Enheden og hubben har ikke længere kontakt med hinanden.	Lavt batteri.	Udskift batteri.
4.	Lysdioden lyser rødt hele tiden.	Produktet virker ikke.	Kontakt din forhandler.

GARANTI

DC324 leveres med en 5-årig garanti mod fabrikkationsfejl. (Gyldigt fra købsdato.) Batteriet er ikke inkluderet i garantien. Garanti-ansvaret er begrænset, og svarer til værdien af en ny tilsvarende sensor. Defekte detektorer skal returneres til butikken med en beskrivelse af fejlen. Godkendte reklamationer erstattes med en ny detektor af samme type. Ved reklamation med kvittering med købsdato fremvises.